




Chromebook Network Connectic

Troubleshooting Network Connectivity

If you lose network connection while logged in, you can click the WiFi icon in the lower right hand corner of the screen.

Click Not Connected.

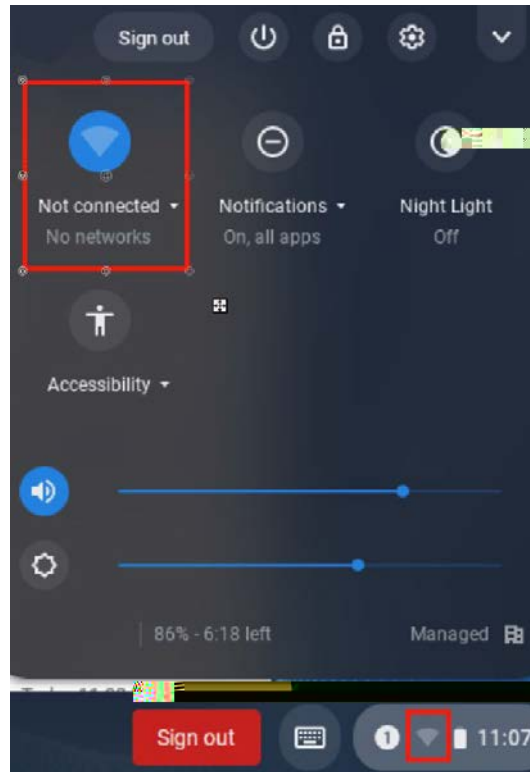

Ensure the slider is to the right and blue to indicate the WiFi is on. Select your home network and enter the password.

